



# Econo Cube™ Cubicle Track

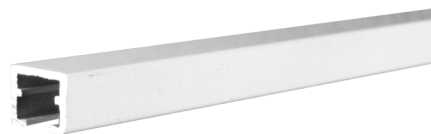

Product  
Guide ①

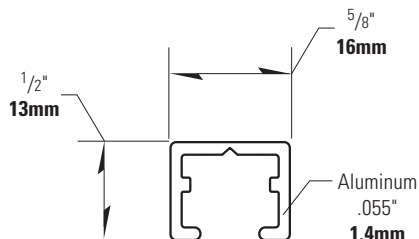

- ① Extruded aluminum track with white baked acrylic enamel finish
- ① Simple compact design is a cost-effective track alternative
- ① Splices and bends available for quick on-site installation
- ① Manufactured in 8' (2.44m) or 16' (4.88m) lengths to accommodate any application

IPC.503/REV.7

# Econo Cube

## Suggested Specifications

### PART 1 - GENERAL

#### 1.01 SUMMARY

- A. Cubicle Tracking Systems

#### 1.02 SECTION INCLUDES

- A. Econo Cube Cubicle Tracking System
- 1. Overhead metal curtain track and guides
- 2. Track accessories and attachments

#### 1.03 SUBMITTALS

- A. Product Data: Manufacturer's printed product data for each type of cubicle tracking system specified.
- B. Detail Drawings: Mounting details with the appropriate fasteners for specific project substrates.
- C. Samples: Verification samples of cubicle track, 4" (102mm) long, in full size, with carriers and end cap.
- D. Manufacturer's Installation Instruction: Printed installation instructions for each cubicle tracking system.

#### 1.04 DELIVERY, STORAGE AND HANDLING

- A. Deliver materials in unopened factory packaging to the jobsite.
- B. Inspect materials at delivery to assure that specified products have been received.
- C. Store in original packaging in a climate controlled location away from direct sunlight.

#### 1.05 PROJECT CONDITIONS

- A. Environmental Requirements: Products must be installed in an interior climate controlled environment.

#### 1.06 WARRANTY

- A. Standard Clickeze Limited Lifetime Warranty against material and manufacturing defects.

### PART 2 - PRODUCTS

#### 2.01 MANUFACTURER

- A. Acceptable Manufacturer: Clickeze, InPro Corporation, PO Box 406 Muskego, WI 53150 USA; Telephone: 800-222-5556; Fax: 888-715-8407, Internet address: <http://www.inprocorp.com>
- B. Substitutions: Not permitted
- C. Provide all cubicle tracking systems from a single source.

#### 2.02 TRACK MATERIAL

- A. Cubicle Tracking System
- 1. Econo Cube, extruded aluminum cubicle track with white baked acrylic enamel finish. Aluminum shall be 6063-T5.  
Dimensions: height 1/2" (13mm), width 5/8" (16mm).  
CE700008 - 8 foot length (2.44m)  
CE700016 - 16 foot length (4.88m)
- 2. Bent sections: Provide factory bent track sections with one-foot radii to mate with straight track sections:  
CE7042 - 2' x 2', 45° bend  
CE7092 - 2' x 2', 90° bend

#### 2.03 TRACK COMPONENTS

- A. Track Splice: Provide molded thermoplastic splice to join track sections.  
CE7017 - Track Splice
- B. End Caps: Provide molded thermoplastic end caps for end of track section.  
CE7025 End Cap
- C. Wands: Provide wand to move curtain along track.  
CE9224 - Adjustable Chain Wand 24" length (609mm)  
CE100702 - Drapery Wand 33"  
CE100679 - Drapery Wand 36"  
CE100698 - Drapery Wand 48"
- D. Curtain Carriers: Provide non-binding carriers to accurately fit track. Carriers to be fitted to curtain to prevent accidental curtain removal. 2.2 carriers per lineal foot of track length, plus one extra carrier.  
CE7019 - Econo Cube Slide Carriers
- E. Tie Backs: Provide curtain tie back to hold curtain back.  
CE9251 - Curtain Tie Back - 48" (1.22m) long chain  
Fabric Tie Back - 3" x 18", 3/4" white velcro each end.
- F. Adjustable Drop Chain: Provide drop chain and adjust on site to accommodate curtain at desired height for air/stream circulation.  
CE9039 - Adjustable Drop Chain

### PART 3 - EXECUTION

#### 3.01 EXAMINATION

- A. Examine areas and conditions in which the cubicle tracking systems will be installed.
- 1. Complete all finishing operations, including painting, before beginning installation of cubicle tracking system materials.
- 2. Verify that surfaces and above ceiling supports are ready to receive work.

#### 3.02 PREPARATION

- A. General: Prior to installation, clean substrate to remove dust, debris and loose particles.

#### 3.03 INSTALLATION

- A. General: Locate the cubicle track as indicated on the approved detail drawing for the appropriate substrate and in compliance with the Clickeze installation instructions.
- B. Installation of Cubicle Tracking Systems:
  - 1. Install cubicle track, secure, rigid, and true to ceiling line.
  - 2. Slide carriers onto the track.
  - 3. Install end cap or stop device.
  - 4. Secure or suspend track to ceiling system.
  - 5. Install curtains on carriers ensuring smooth operation.

#### 3.04 CLEANING

- A. At completion of the installation, remove any debris and clean surfaces in accordance with the Clickeze clean-up and maintenance instructions.

P.O. Box 406 · Muskego, Wisconsin 53150 USA

[inprocorp.com](http://inprocorp.com)

Nationwide **800.222.5556**/Fax 888.715.8407

International Sales **262.679.5521** / Fax 262.679.5524